

Mobile Broadband USB Modem  
MD300 HSDPA/UMTS/EDGE

**Quick Start Guide**



Sony Ericsson

## INTRODUCTION

Thank you for choosing a Sony Ericsson MD300 Mobile Broadband USB Modem. The Wireless Manager application is automatically installed when you plug in the MD300 to your PC. You can connect using HSDPA, UMTS, EDGE and GPRS. You can also send and receive SMS messages. **Note:** Your MD300 does not support GSM or UMTS voice calls.

## BEFORE YOU BEGIN

Wireless Manager works with the following versions of the Windows® operating system:


- Windows 2000 Service Pack 4 (SP4)
- Windows XP Service Pack 2 (SP2); 32-bit (x86) and 64-bit (x64) processors
- Windows Vista™; 32-bit (x86) and 64-bit (x64) processors

Your PC must meet or exceed the minimum system requirements for your version of Windows. In addition, you will need:

- Available USB port on PC or self powered hub
- 110 MB of available disk space
- Your subscription must support Internet access over GPRS/EDGE/UMTS/HSDPA.

## INSTALLING YOUR MD300 AND WIRELESS MANAGER 5

1. Insert your SIM card into the SIM slot on your MD300 until it clicks into place (Figure 1). Make sure the gold contacts on the SIM card are facing the USB plug and the angled corner (A) of the SIM card is placed into the MD300 as shown.
2. Plug your MD300 into a USB port on your PC (Figure 2).

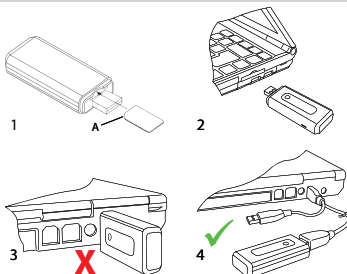

**Important:** Do not subject the MD300 to any pressure, such as supporting the weight of your laptop (Figure 3), instead use the extension cable (Figure 4).

3. After a few seconds, the Sony Ericsson MD300 dialog box opens. Select **Install Wireless Manager**.

**Note:** If the Sony Ericsson MD300 dialog box fails to appear, open Windows Explorer, navigate to My Computer, find the disk drive called Sony Ericsson MD300 and double-click Setup.exe in the INSTALL folder.

4. The software installation procedure starts. Follow the on-screen instructions.

**Important:** The installation process might pause for several minutes. During this time the drivers are saved to your hard drive. DO NOT cancel.

**Note:** Wireless Manager is installed in the same language as your Windows operating system. If Wireless Manager does not support your language, English is installed.

5. When installation is complete, click **Finish**.
6. Unplug the MD300, wait 10 seconds and plug it back in.
7. Once you receive the Hardware Ready message, your MD300 and Wireless Manager are now installed and ready for use.

**Note:** A few PCs cannot provide sufficient current through one USB port, in which case the MD300 will fail to start or cannot run properly. Use the extension cable and both USB plugs.

## STARTING WIRELESS MANAGER

1. Select **Start → All Programs → Sony Ericsson → Wireless Manager 5 → Wireless Manager 5**.
2. Wireless Manager opens. If requested, enter your SIM card PIN, and then click **OK**.
3. Click the **Enable** button to turn on the radio transmitter. After a short delay your signal strength and the name of your network operator are displayed in the Status window.



## CREATING A CONNECTION PROFILE

Wireless Manager should identify your network operator from the information in your SIM card and automatically configure your Internet connection. The **Connect** button will be ready for you to click and make a connection.

 
If you see a 'No Connection Profile' message or if you wish to define your connection manually:

 
1. From the Wireless Manager window, select **View → Settings** and click on **Profiles**.
2. Un-check the **Let Wireless Manager Choose the Connection Profile** check box and click the **New** button.
3. Enter the necessary information and click **OK**. Press F1 if you need help.

## USING A CONNECTION






1. Start Wireless Manager.
2. Click the **Connect** button or right-click the status icon  and select **Connect**.
3. To end the connection, click **Disconnect** or right-click the status icon  and select **Disconnect**.

## WIRELESS MANAGER STATUS ICON


The Wireless Manager status icon  is displayed in the Windows notification area located in the lower right-hand corner of the screen, by the clock.




The icon displays the status of your MD300, typically the signal strength on a scale of zero to five bars and the type of network available. The most common states are:





-  The MD300 has mobile network service of type **HSDPA**, **UMTS**, **EDGE** or **GPRS**.
-  The MD300 is searching for a network.
-  Radio is disabled. Right-click and select **Enable Radio** to turn it on.
-  Wireless Manager is waiting for your MD300 to be inserted.
-  Wireless Manager is waiting for you to enter your SIM PIN code.

## DISABLING THE RADIO AND EXITING WIRELESS MANAGER

To disable the radio, right-click  or select **Radio → Disable Radio**.

To exit Wireless Manager, select **Radio → Exit** or right-click the status icon  and select **Exit**.

## FURTHER WIRELESS MANAGER AND MD300 FEATURES

You can also use Wireless Manager to view and change settings , work with the SIM phone book , send and receive SMS messages  and access PlayNow™ . Press F1 or click Help for detailed information. You can also use your MD300 as a flash memory drive to store and transport files – go to **Settings → Flash Memory Drive**.

## ADDITIONAL RESOURCES

Click **Start → All Programs → Sony Ericsson → Wireless Manager 5 → MD300 User Guide** to access the *MD300 User Guide*.

You can download Wireless Manager for manual installation and obtain the latest information, updates and a printable *Wireless Manager User Guide* from the Sony Ericsson web site: [www.sonyericsson.com/support](http://www.sonyericsson.com/support)

## SERVICE AND SUPPORT

Purchasing an MD300 gives you access to a number of exclusive advantages such as global and local web site support, a global network of call centers, and an extensive global network of Sony Ericsson service partners.

The terms and conditions of your Sony Ericsson warranty are listed in the User Guide and also available on the web at [www.sonyericsson.com/support](http://www.sonyericsson.com/support). Save your original proof of purchase, you will need it for warranty repair claims.

In the unlikely event your product needs service, please return it to the dealer from whom it was purchased or one of our service partners. For more information, go to [www.sonyericsson.com/support](http://www.sonyericsson.com/support) or contact our call center. The phone numbers and e-mail addresses are listed on the back page of this guide. If your country/region is not represented on the list, please contact your local dealer.

The caller will be charged according to national rates, including local taxes, unless the phone number is a toll-free number.

## TRADEMARKS AND NOTICES

© Sony Ericsson Mobile Communications AB, 2008. All rights reserved.

Publication number: EN/1209-8401

This document is published by Sony Ericsson Mobile Communications AB, Sweden, without any warranty. The information in this document may change without notice due to typographical errors, inaccurate information, or improvements to programs and/or equipment. Such changes will be incorporated into new editions of this document by Sony Ericsson Mobile Communications AB. Sony Ericsson is the trademark or registered trademark of Sony Ericsson Mobile Communications AB. Windows 2000, XP and Vista are registered trademarks or trademarks of Microsoft Corporation in the United States and/or other countries.

All other product or service names mentioned in this guide are trademarks of their respective companies. The information contained in this document was correct at the time of printing.

# CONTACT SONY ERICSSON

Argentina	800-333-7427 questions.AR@support.sonyericsson.com
Aruba	888-821-8408
Australia	1-300 650 050 questions.AU@support.sonyericsson.com
Austria	0810 200245 questions.AT@support.sonyericsson.com
Barbados	1-888-821-8408
Belgium	02-7451611 questions.BE@support.sonyericsson.com
Bolivia	800 101 110 - 800 853 3458 (English) 800 101 111 - 800 853 3458 (Spanish)
Brazil	4001-0444 questions.BR@support.sonyericsson.com
Canada	1-866-766-9374 questions.CA@support.sonyericsson.com
Cayman Islands	1-888-821-8408
Central Africa	+27 112589023 questions.CF@support.sonyericsson.com
Chile	123-0020-0656 questions.CL@support.sonyericsson.com
China	4008100000 questions.CN@support.sonyericsson.com
Colombia	18009122135 questions.CO@support.sonyericsson.com
Costa Rica	0-800-011-0400 1-800-821-8408
Croatia	062 000 000 questions.HR@support.sonyericsson.com
Czech Republic	844 550 055 questions.CZ@support.sonyericsson.com
Denmark	33 31 28 28 questions.DK@support.sonyericsson.com
Dominican Republic	1-888-821-8408
Ecuador	1 999 119 - 800 853 3458 1 800 225 528 - 800 853 3458 1 800 999 119 - 800 853 3458 (Spanish)
El Salvador	155 0018001785 - 800 853 3458
Estonia	372 (0)6 032 032
Finland	09-299 2000 questions.FI@support.sonyericsson.com
France	0 825 383 383 questions.FR@support.sonyericsson.com
Germany	0180 534 2020 questions.DE@support.sonyericsson.com
Greece	801-11-810-810 210-89 91 919 (from mobile phone) questions.GR@support.sonyericsson.com
Guatemala	1-800-999-4030
Haiti	001-800-0-123
Honduras	001 800 0 123 - 800 853 3458
Hong Kong	8203 8863 questions.HK@support.sonyericsson.com
Hungary	+36 1 880 47 47 questions.HU@support.sonyericsson.com
India	1800 11 1800 (toll free number) 39011111 (from mobile phone) questions.IN@support.sonyericsson.com
Indonesia	021-2701388 questions.ID@support.sonyericsson.com
Ireland	1850 545 888 questions.IE@support.sonyericsson.com
Italy	06 48895206 questions.IT@support.sonyericsson.com
Jamaica	1-888-821-8408
Latvia	67 21 43 01

Lithuania	8 700 55030 questions.LT@support.sonyericsson.com
Malaysia	1-800-889900 questions.MY@support.sonyericsson.com
Mexico	01 800 000 4722 questions.MX@support.sonyericsson.com
Netherlands	0900 899 8318 questions.NL@support.sonyericsson.com
New Zealand	0800-100150 questions.NZ@support.sonyericsson.com
Nicaragua	1 800 0174 - 800 853 3458 1 800 0164 - 800 853 3458 (Spanish)
Norway	815 00 840 questions.NO@support.sonyericsson.com
Pakistan	111 22 55 73 (92-21) 111 22 55 73 (Outside Karachi) questions.PK@support.sonyericsson.com
Panama	001-888-821-8408
Paraguay	800 853 3458 008 11 800 - 800 853 3458 (Asuncion City)
Peru	0 800 70 088 - 800 853 3458 0 800 50 288 - 800 853 3458 (English) 0 800 5 0000 - 800 853 3458 (Spanish)
Philippines	+63 (02) 7891860 questions.PH@support.sonyericsson.com
Poland	0 (prefix) 22 6916200 questions.PL@support.sonyericsson.com
Portugal	808 204 466 questions.PT@support.sonyericsson.com
Romania	(+4021) 401 0401 questions.RO@support.sonyericsson.com
Russia	8(495) 787 0986 questions.RU@support.sonyericsson.com
Singapore	67440733 questions.SG@support.sonyericsson.com
Slovakia	02-5443 6443 questions.SK@support.sonyericsson.com
South Africa	0861 632222 questions.ZA@support.sonyericsson.com
Spain	902 180 576 questions.ES@support.sonyericsson.com
St. Vincent and the Grenadines	1888-821-8408
Suriname	156
Sweden	013-24 45 00 questions.SE@support.sonyericsson.com
Switzerland	0848 824 040 questions.CH@support.sonyericsson.com
Taiwan	02-2562511 questions.TW@support.sonyericsson.com
Thailand	02-2483030 questions.TH@support.sonyericsson.com
Trinidad and Tobago	1888-821-8408
Turkey	0212 473 77 77 questions.TR@support.sonyericsson.com
Ukraine	(+380) 44 590 1515 questions.UA@support.sonyericsson.com
United Arab Emirates	43 919880 questions.AE@support.sonyericsson.com
United Kingdom	08705 23 7237 questions.GB@support.sonyericsson.com
United States	1-866-766-9374 questions.US@support.sonyericsson.com
Uruguay	000 410 - 800 853 3458
Venezuela	0-800-100-2250 questions.VE@support.sonyericsson.com
Vietnam	111 2255 73 questions.VN@support.sonyericsson.com